




































Connecteurs BNC

			
Boot BNC RG 58- 59 174U. Rf 04-00	Boot BNC RG 58- 59 174U. Rf 04-00X	BNC M. Souder RG58.59 U FEX 5 Rf 04-001	BNC H. Souder RG58. 59U Rf 04-002
			
BNC M. Crimp. RG 58 U. Ref04-004	BNC M. RG58U Polarité inverse Rf 04-004AX	BNC M RG6.11.58.59.174.213 .223U Rf.04-004-50 Ohm	BNC M F2.F3.F5.RG179U ST212, ST214 Digital Rf 04-004-75 Ohm
			
Terminaison BNC 50, 75 Ohm. Rf 04-007	BNC M. Fileté RG58 59U Rf. 04-008	BNC F. Fileté RG58.59U Rf 04-009	BNC F. pour panneau à souder Rf 04-010
			
BNC F. Pour panneau Rf 04-011	BNC F. Panneau sertir RG59U Rf. 04-012	BNC F. RG58.59.174 213 U Rf 04-013-50 Ohm	BNC Fe. F2.F3.F5 RG179 U Rf 04-013- 75 Ohm

			
BNC M. sertir 90° RG 58 59 U F3-F5 ST214 Rf 04-014	BNC M. Panneau souder Rf 04-019	BNC M Panneau isolé souder Rf 04-020	BNC M. Souder RG213 U Rf 04-023
			
BNC M Chasis RG 59U Rf 04025	BNC M Souder RG58 59U Rf 04025	Bouchon prot.. BNC M Rf. 04-026	Bouchon prot NBC Fe Rf.04-027
			
BNC M. Souder Rf 04- 028	BNC M. Chasis souder Rf. 04-030	Adapt. BNC Fe-Fe Panneau Rf 04-033	Adap. BNC Fe-Fe isolé. Rf 04-033P
			
Adap. F-F aérien BNC Rf 04-034	Adap. M-M aérien BNC Rf 04-035	Adap. F-F Châsis BNC Rf 04-036	Adap. BNC M-F 90 ° Rf 04-037
			
BNC 2H-1M Rf 04-038	Adap T 3 F Rf 04-039	Adap T 3 M Rf 04-040	BNC 2M-1F Rf 04-041
			
Adap. BNC M-UHF M Rf	Adap. BNC M-UHF H Rf	Adap. BNC FH-UHF H	Adap. BNC M-RCA M

04-042	04-043	Rf 04-044	Rf 04-045
			
Adaptateur BNC F- RCA M. Rf 04-046	Adaptateur BNC M- RCA F. Rf 04-047	Adaptateur BNC M. F.F Ref 04-048	Adaptateur BNC F. F.F. Ref 04-049
			
Adaptateur BNC F – F.M. Ref 05-050	Adaptateur BNC M.- F M. Ref 04-050	Pont+ prise BNC 1M. 2 F. Ref 04-053	Pont+ prise BNC 1F. 2 M. Ref 04-053
			
BNC H. souder PC droit, Ref 04-057	BNC F. souder PC 90° 50 Ohm.	BNC H. panneau 90° metal Ref 04-058M	BNC F. panneau sertir RG58,59,174,213U,F5 Ref 04-059
			
BNC F. panneau RG 58U polarisé inverse. Ref 04059AX	Terminaison BNC F. 50 Ohm. Ref 04060	Terminaison BNC M. 50 Ohm avec chaine Ref 04-061	Terminaison BNC M. 50 Ohm Ref 04-062